


Press the parameter setting button to display the following page

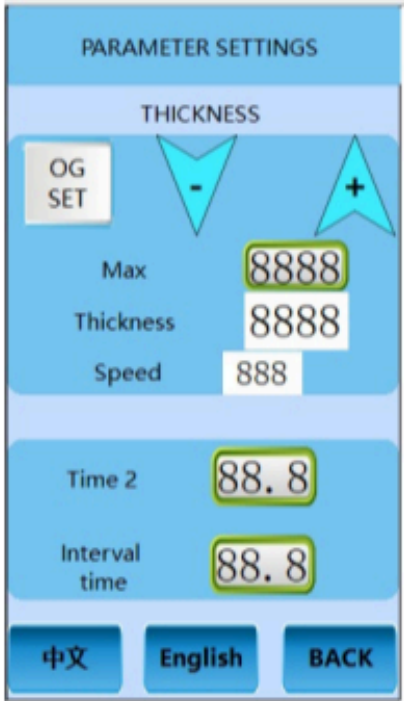

This page does not require any settings.

Set as Origin

Set the starting origin of the thickness (set the current position to zero thickness)

Thickness “—”

The rice spreading wheel is lowered and the thickness is reduced

Thickness “+”

The rice spreading wheel is lifted and the thickness is increased

Time 2

Cutting pause time

Interval time

When set to automatic, the pause time after completing one processing

Undesirable phenomenon	Adjust
The rice is not evenly spread and there is a lack of rice.	Increase the density value appropriately, or increase the time for cooking rice in advance appropriately
Rice pile up	Adjust the density value appropriately, or adjust the advance time of rice cooking appropriately
Thickness parameter confusion	Press "Parameter Settings", adjust the "Thickness Minus" and "Thickness Plus" buttons, adjust the rice-spreading wheel to the lowest point, press the "Set as Origin" button, and set the origin.

JT-SPFJ08



Rice Sheet Machine Instructions



Thank you very much for purchasing our machine.
To ensure the correct and safe use of the product, please be sure to read this instruction manual before use.



HYQ ET CO.,LTD

Room305, Kaisheng Health City, No.146 Huadi Avenue South,
Liwan District, Guangzhou, China

+86 18122470628
info@sushitech.net

Smart sushi rice making machine

Fully intelligent human-machine interface touch screen adjustment
High efficiency, constant temperature effect, solid rice crust, adjustable size

Specifications

Model：JT-SPFJ08	Cutting machine size: 393×610×480mm
Name: Intelligent sushi rice making machine	Total power/voltage/frequency: 150W/220V/50-60Hz

Interface function introduction

WARMER

Turn on the keep warm function to heat the bottom of the rice bucket;

RESET

The whole machine is reset and the support plate returns to the initial position;

START

The whole machine starts working;

SINGLE ACTION

When the machine is working, it only spreads the rice crust once each time, and you need to press the "start" switch to start the next work;

CONTINUOUS

The whole machine works continuously and spreads rice crust continuously. Press the "Reset" button to stop (single action and continuous action are the same button and are displayed alternately)

EMPTY

Empty the rice in the silo

SINGLE MACHINE (PRODUCTION LINE)

Stand-alone: Stand-alone working mode; install the support plate to work back and forth.

PRODUCTION QUANTITY

Number of consecutive rice laying

PRODUCTION LINE

The production line working mode cooperates with the assembly line to work automatically and continuously.

M

When disassembling and assembling the rice-spreading wheel, press this button to stop the machine at the appropriate position for easy assembly and disassembly.



MANUAL SETTING

See the Manual Setup page.

FORMULA

Used to set recipe parameters


STOP

Machine suspension

PARAMETER SETTINGS

See parameter settings page

Press the "FORMULA" button, and the following page will appear to adjust the parameters of each recipe.

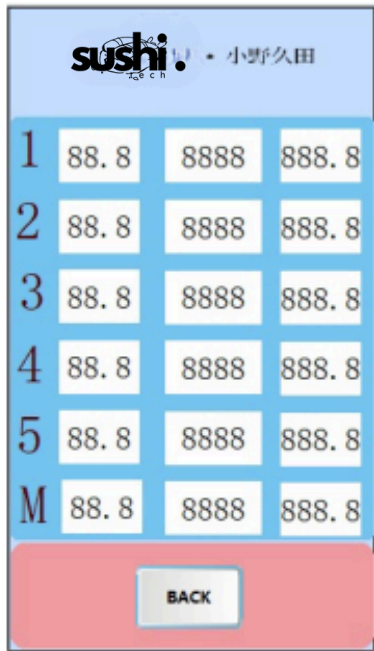

Parameters from left to right are:
length, thickness, density

- S: The larger the number, the longer the length
- PULS: The larger the number, the thicker the thickness
- P: The larger the number, the greater the density

Press the "Manual Setting" button and the following page will appear



Clicking the "Auto" button will change to "Manual" and you can press other buttons to operate.

count reset

The "Production Quantity" on the home page will be reset to zero.

RICE PRESS WHEEL

The rice-laying wheel turns

STIR

The rice delivery wheel rotates

CUTTER CUT

Cut with knife

CUTTER BACK

Cutter Lift

BORAD OUR

Rice board out

BOARD BACK

Rice board out

TIME TO PREPARE THE RICE

Set the delay time when the rice delivery wheel returns. Normally, no adjustment is required.